


How to measure the orifice disc



Always use the flat side which is showed above

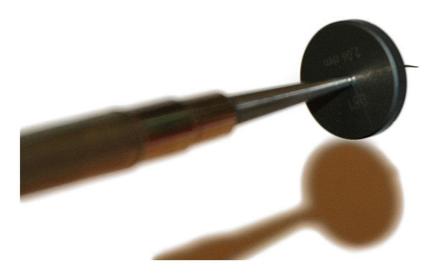

Push the measuring device in the hole





Slide the middle piece to the orifice.



Now you are able to read the standard hole gauge.

The reading works basically the same as a caliper.

Raca International BV Arnoudstraat 22 2182 DZ Hillegom The Netherlands

W www.spraydryingnozzles.com

E info@raca.nl

T +31 (0)252 - 22 70 70 F +31 (0)252 - 53 39 22